



Meshwork with Clover Quick Bias Tape

--- Coin Case ---



Open

Materials

Clover Quick Bias 6 mm 700/1126 Black 1 reel

Clover Quick Bias Rainbow 6 mm 700/0777 1 reel

Fabrics

Base fabric: 4 x 33 cm

Lining: 15.5 x 26 cm

Pocket: 30 x 26 cm

Pocket cover: 11 x 12 cm

Piping (Bias): 5 x 65 cm

Cord: Diameter ca. 2 mm x 8 cm

Clover Magnetic Snap Closures 14 mm (Art No. 6240)


Clover Tape Maker 25 mm (Art No. 4014)

Clover Bodkin (Art No. 4001)


Button: ca. 14 mm

How to make a basic weave.


1. Draw guidelines crossing at right angles on base fabric with Clover's Water Soluble Marker (Art No. 515 or 516).

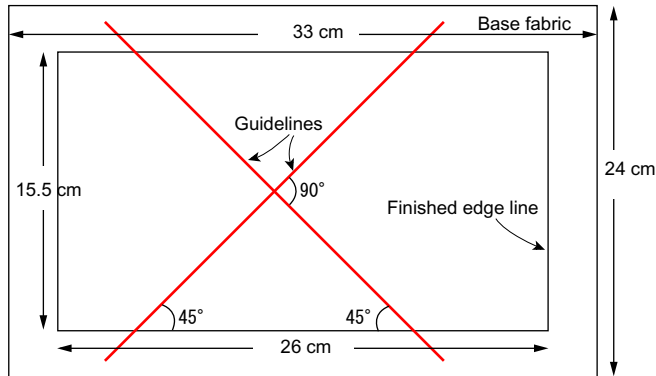

2. Place the base fabric on the ironing board and arrange the Quick Bias Tapes vertically from center to outside. Lay the Quick Bias Tapes so that the upper and lower ends extend 2 cm beyond the finished edge lines. Do not stretch the Quick Bias Tapes.

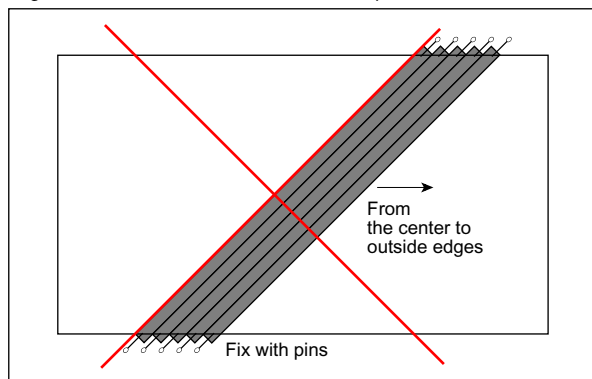


3. Pass the first Quick Bias Tapes alternately over and under the vertical tapes with Clover Bodkin (Art No. 4001). Weave the rest of the tapes to make a checkered pattern.

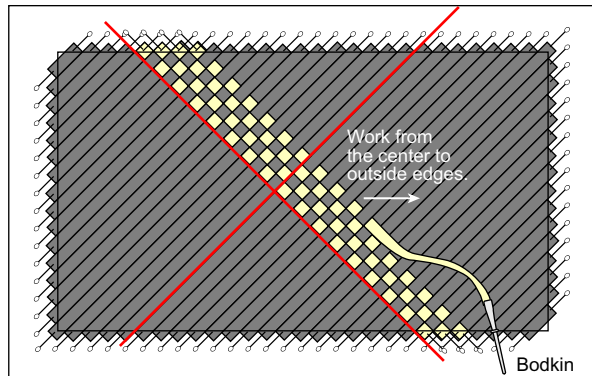


4. Gently arrange the vertical and horizontal tapes at right angles, and Adhere them to the base fabric with an iron. Then sew along the edges with a sewing machine.

Sew along the finished edges with a sewing machine.

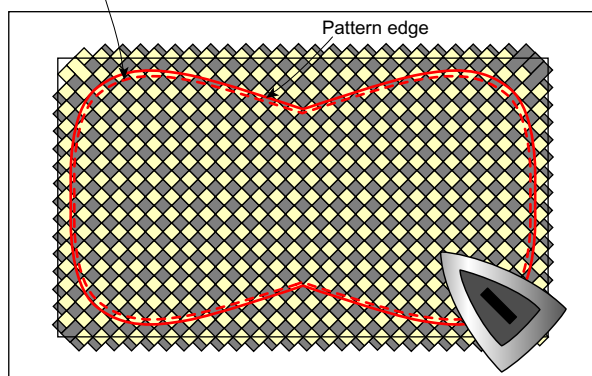


Gently square up the tapes and iron the surface.

5. Prepare for each pattern piece. Trace the patterns and cut. Meshwork fabric

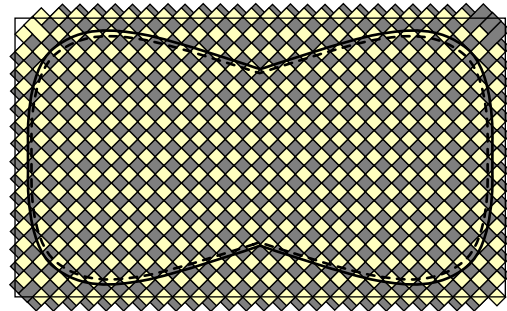


Lining

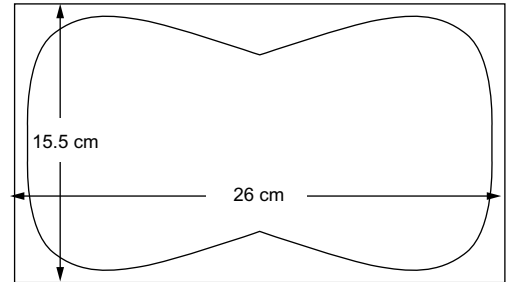


Pocket 2 pieces

26 cm

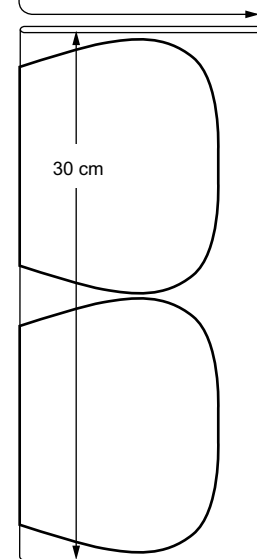


Pocket cover

12 cm

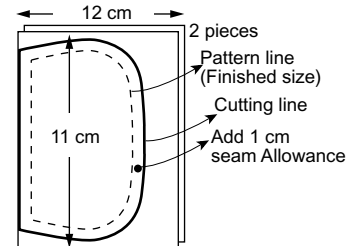

Bias fabric for piping: 5 x 65 cm

Use 25 mm Tape Maker and make 25 mm width bias tape.

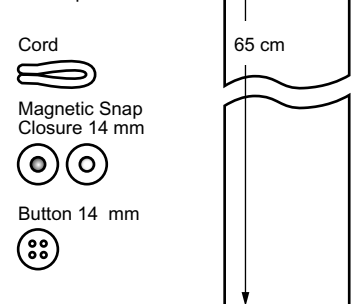

Cord


Magnetic Snap Closure 14 mm

Button 14 mm

Pocket


Stitch the folded edge.

Attach Clover Magnetic Snap Closure 14 mm (Art No. 6240) and button on the top piece.

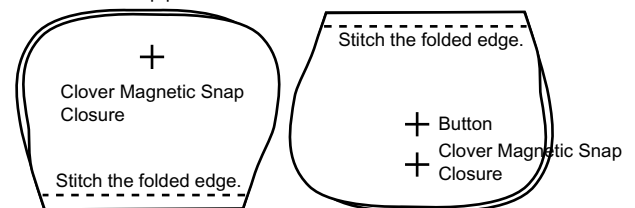


Pocket cover


3. Sew the pocket cover fabrics right side together with the cord. Then turn inside out through opening left at bottom.

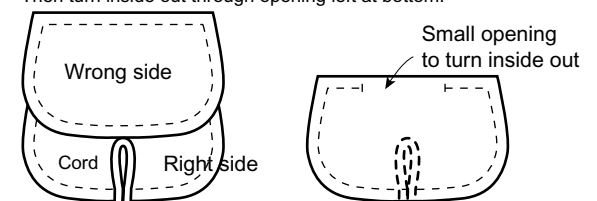

Overlap 4 parts. Baste together.

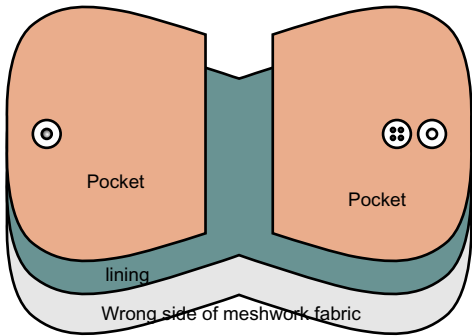


Baste the inside of edge.

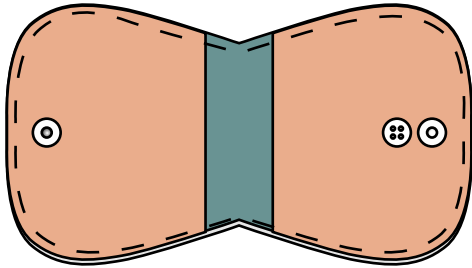


Piping with 25 mm width bias tape.

Right side

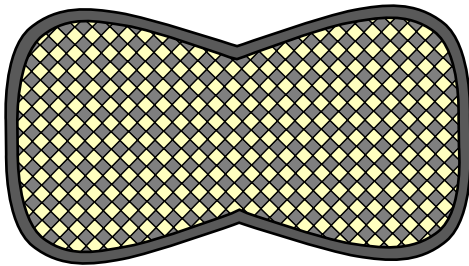

Wrong side

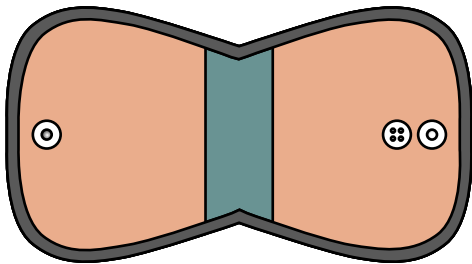

Stitch the pocket cover.

